



# HAWAIKI TOWER

## AUXILIARY DEADBOLT PLACEMENT SPECIFICATIONS

### Vertical Alignment with Existing Hardware:

Centerline of auxiliary deadbolt is to vertically align with centerline of existing cylinder lock and handle escutcheon/rosette.


### Horizontal Placement:

Bottom of auxiliary deadbolt is to be placed to create a 6 ½" clear space, as measured on center of key cylinder ring.

### Hardware Specification:

Schlage - L460L-625 - Cylinder and Thumb turn (or equivalent – alternate must be submitted and approved prior to installation).

Sargent Mortice Cylinder – 41-625-1 ⅛"

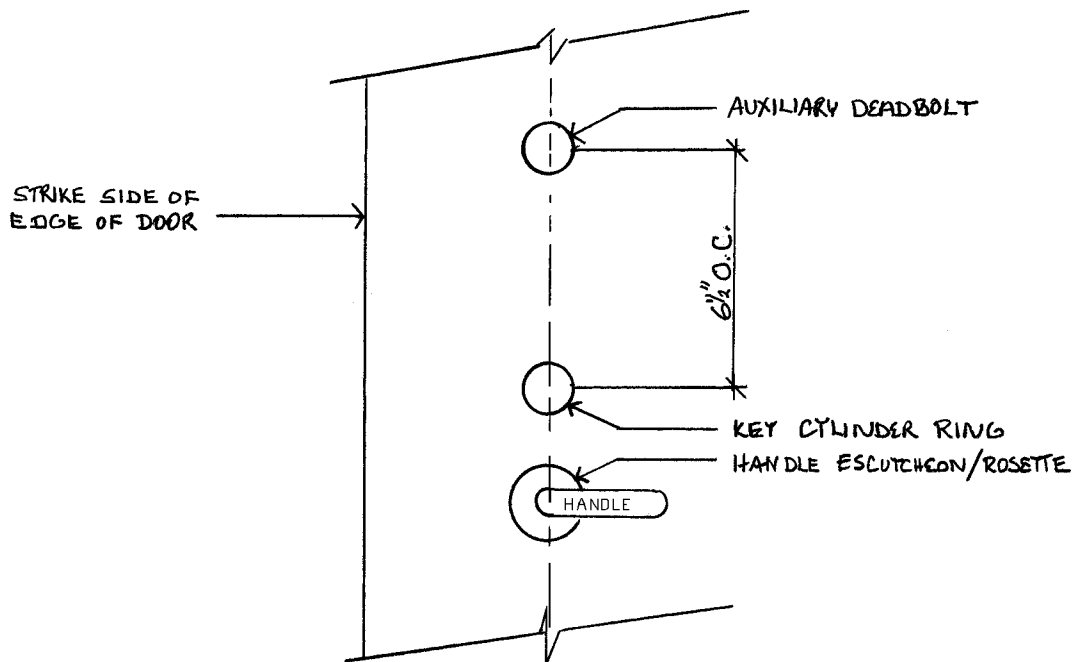

Adopted 29 July 2002